

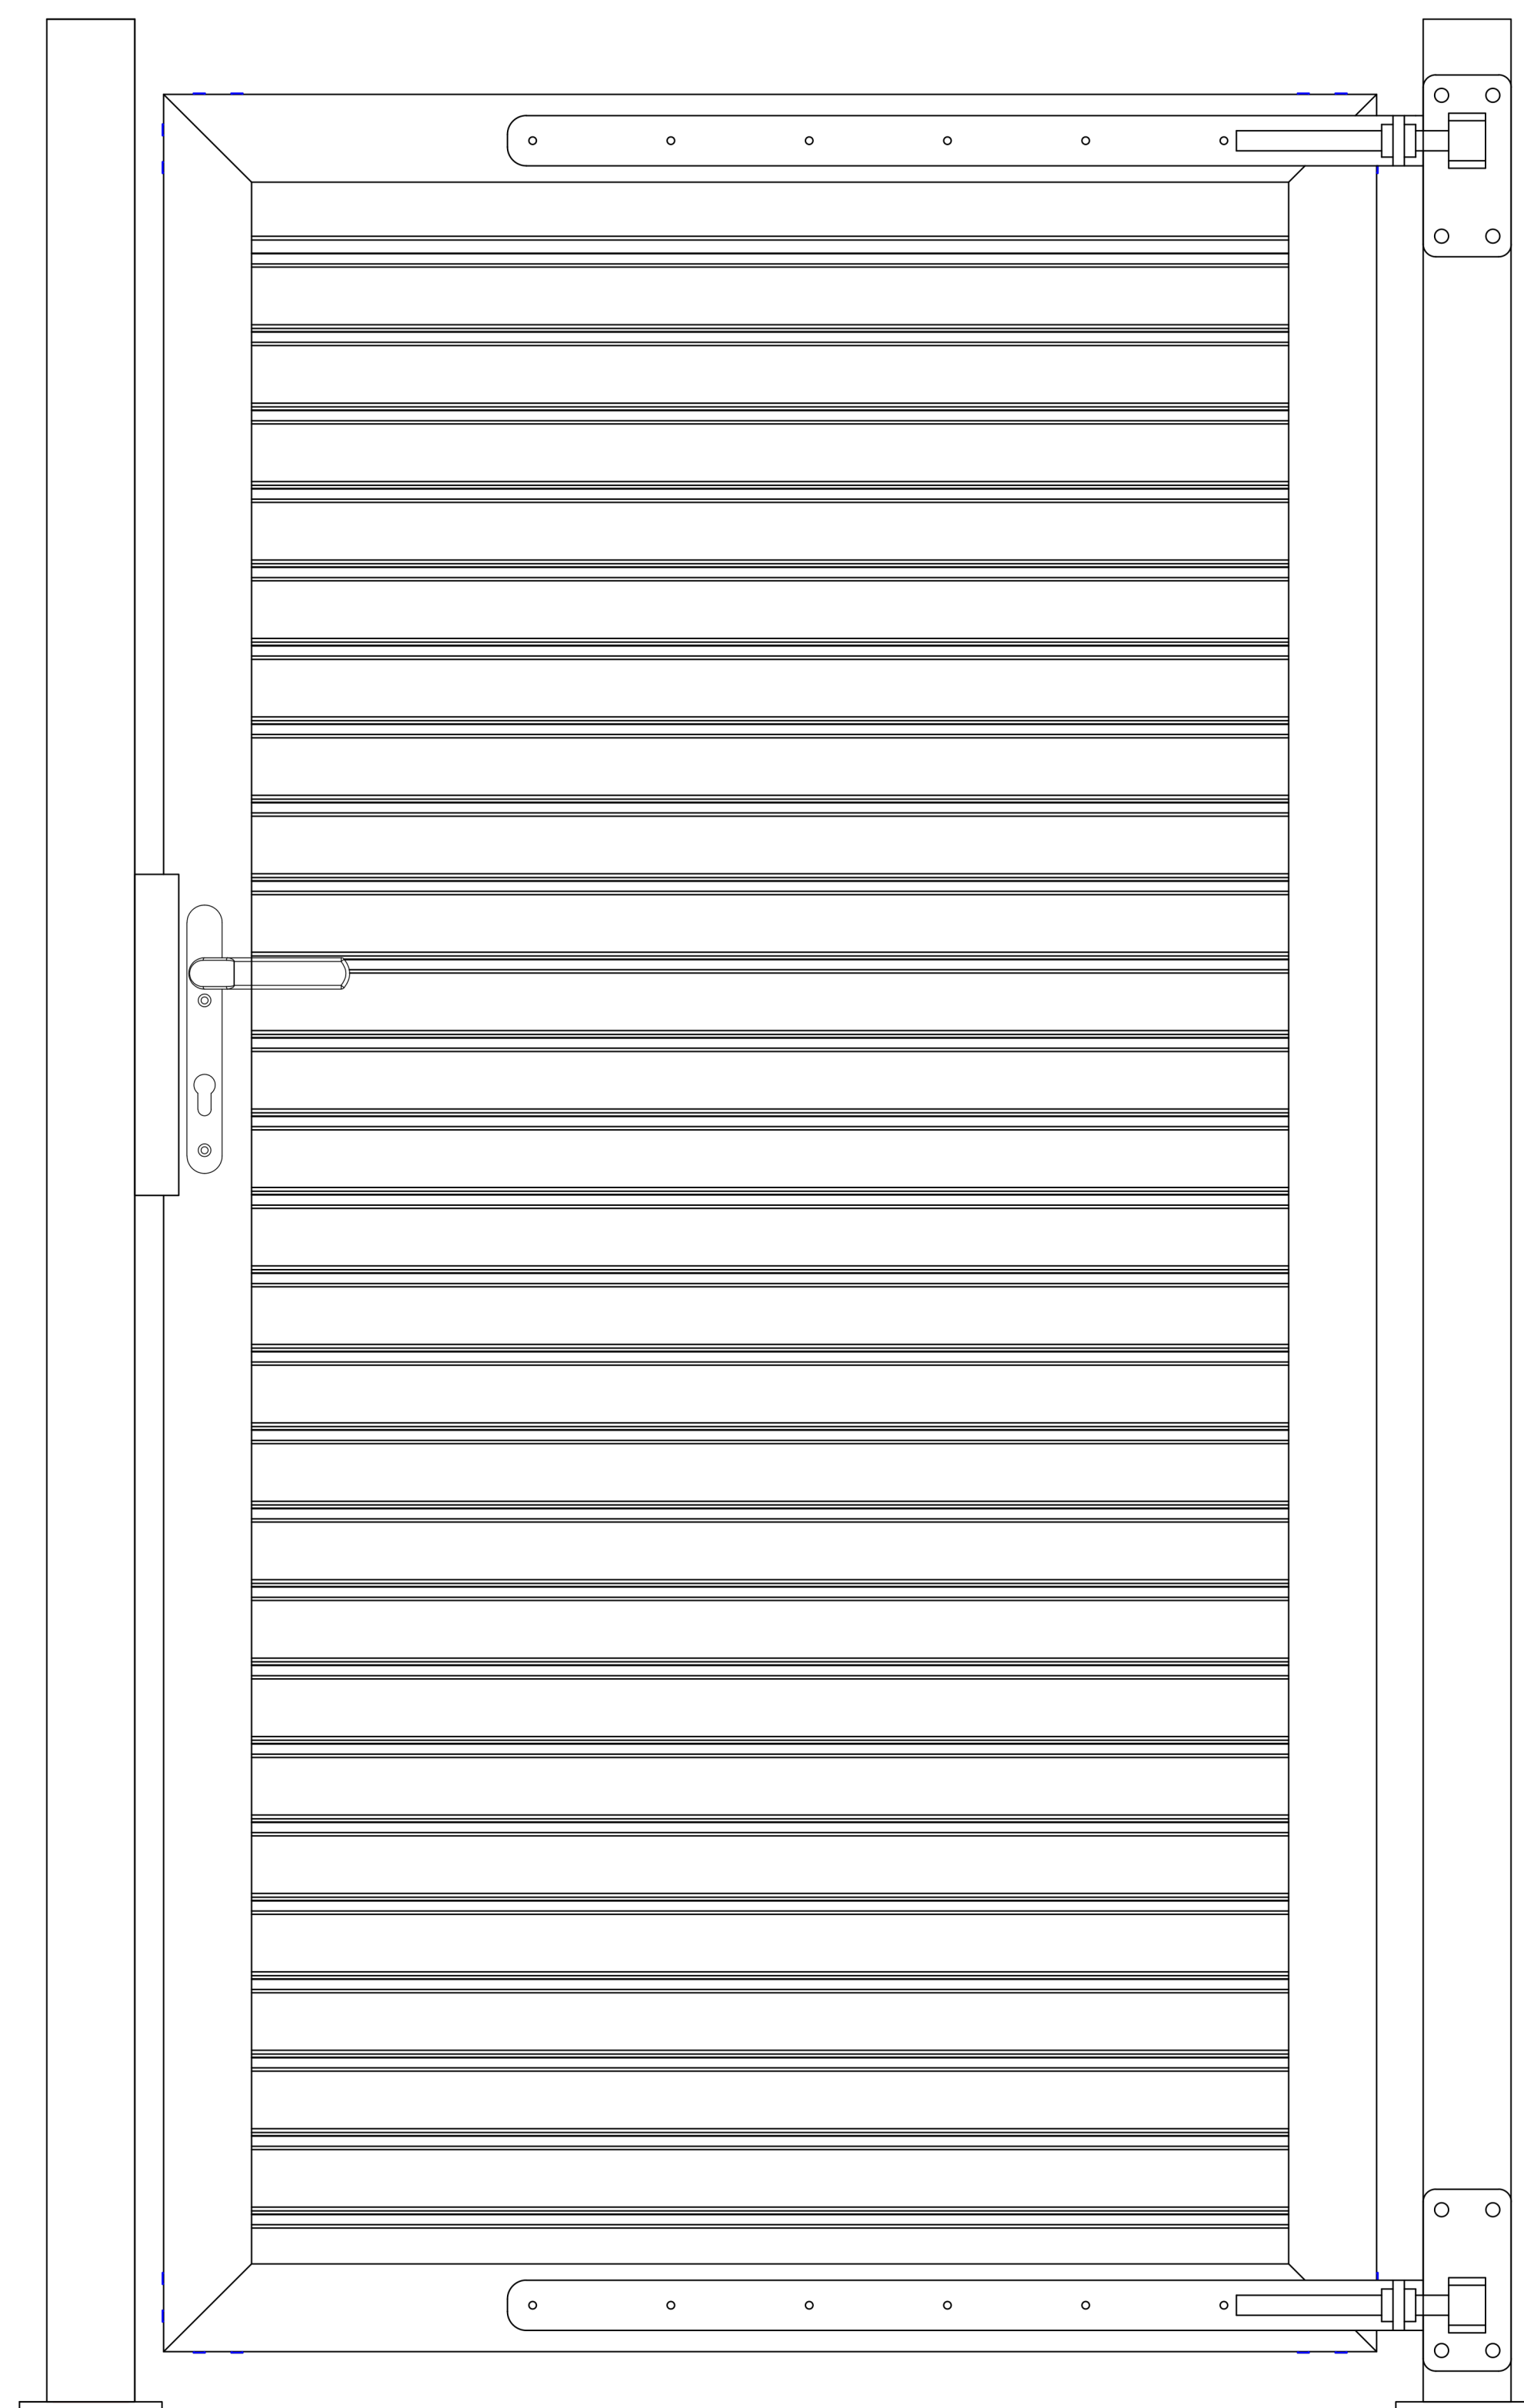
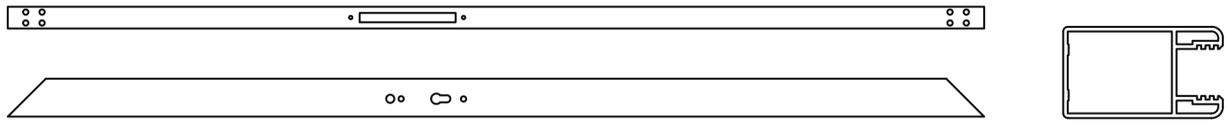
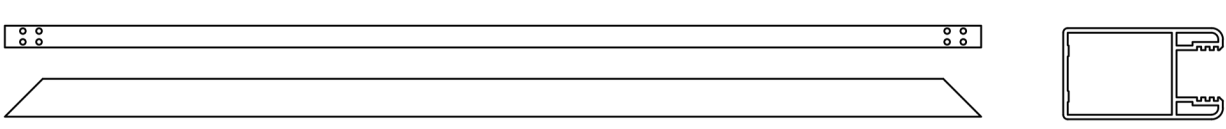
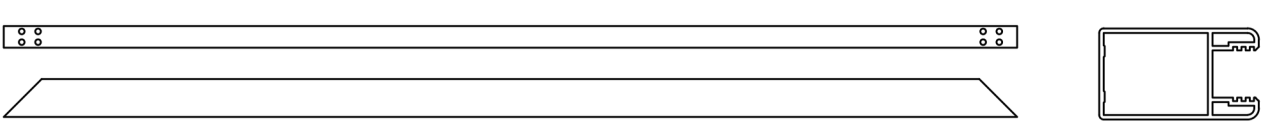
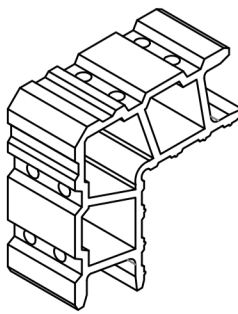

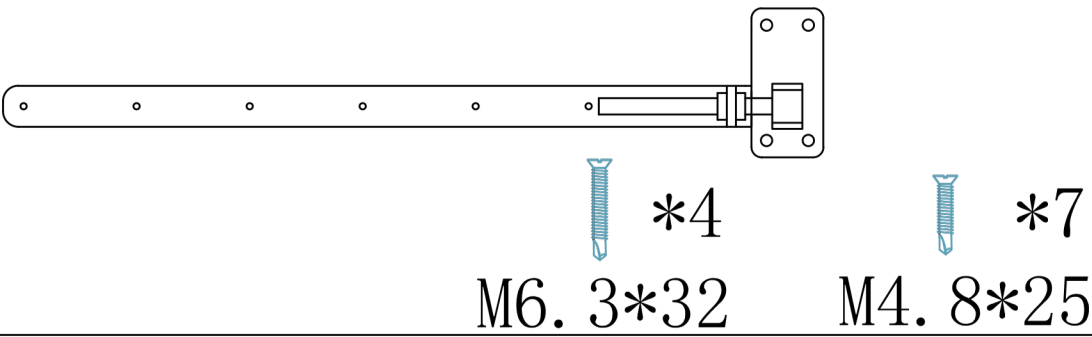
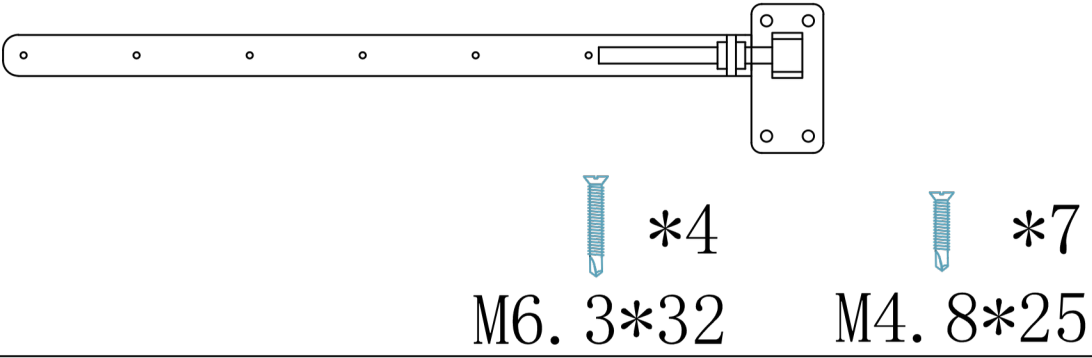


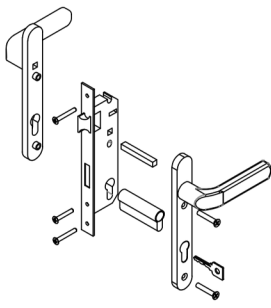

# Anleitung für das MEGA FLEX-Türsystem 100x180 cm.

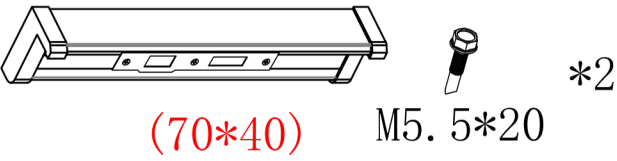

| Karton | Teil | Illustration                                                                                                       | Anzahl |
|--------|------|--------------------------------------------------------------------------------------------------------------------|--------|
| 1/1    | A1   |                                  | 1      |
|        | A2   |                                  | 1      |
|        | A3   |                                 | 2      |
|        | A4   |                               | 4      |
|        | A5   |  1/4*1/2 (TOU 10.5)            | 32     |
|        | A6   | <br>*4 *7<br>M6. 3*32 M4. 8*25 | 1      |
|        | A7   | <br>*4 *7<br>M6. 3*32 M4. 8*25 | 1      |
|        | A8   |                               | 1      |
|        | A9   | <br>(70*40) M5. 5*20 *2       | 1      |
|        |      |                                                                                                                    |        |

22mm


min=10mm  
max=20mm

80mm


2




min=1032mm  
max=1042mm

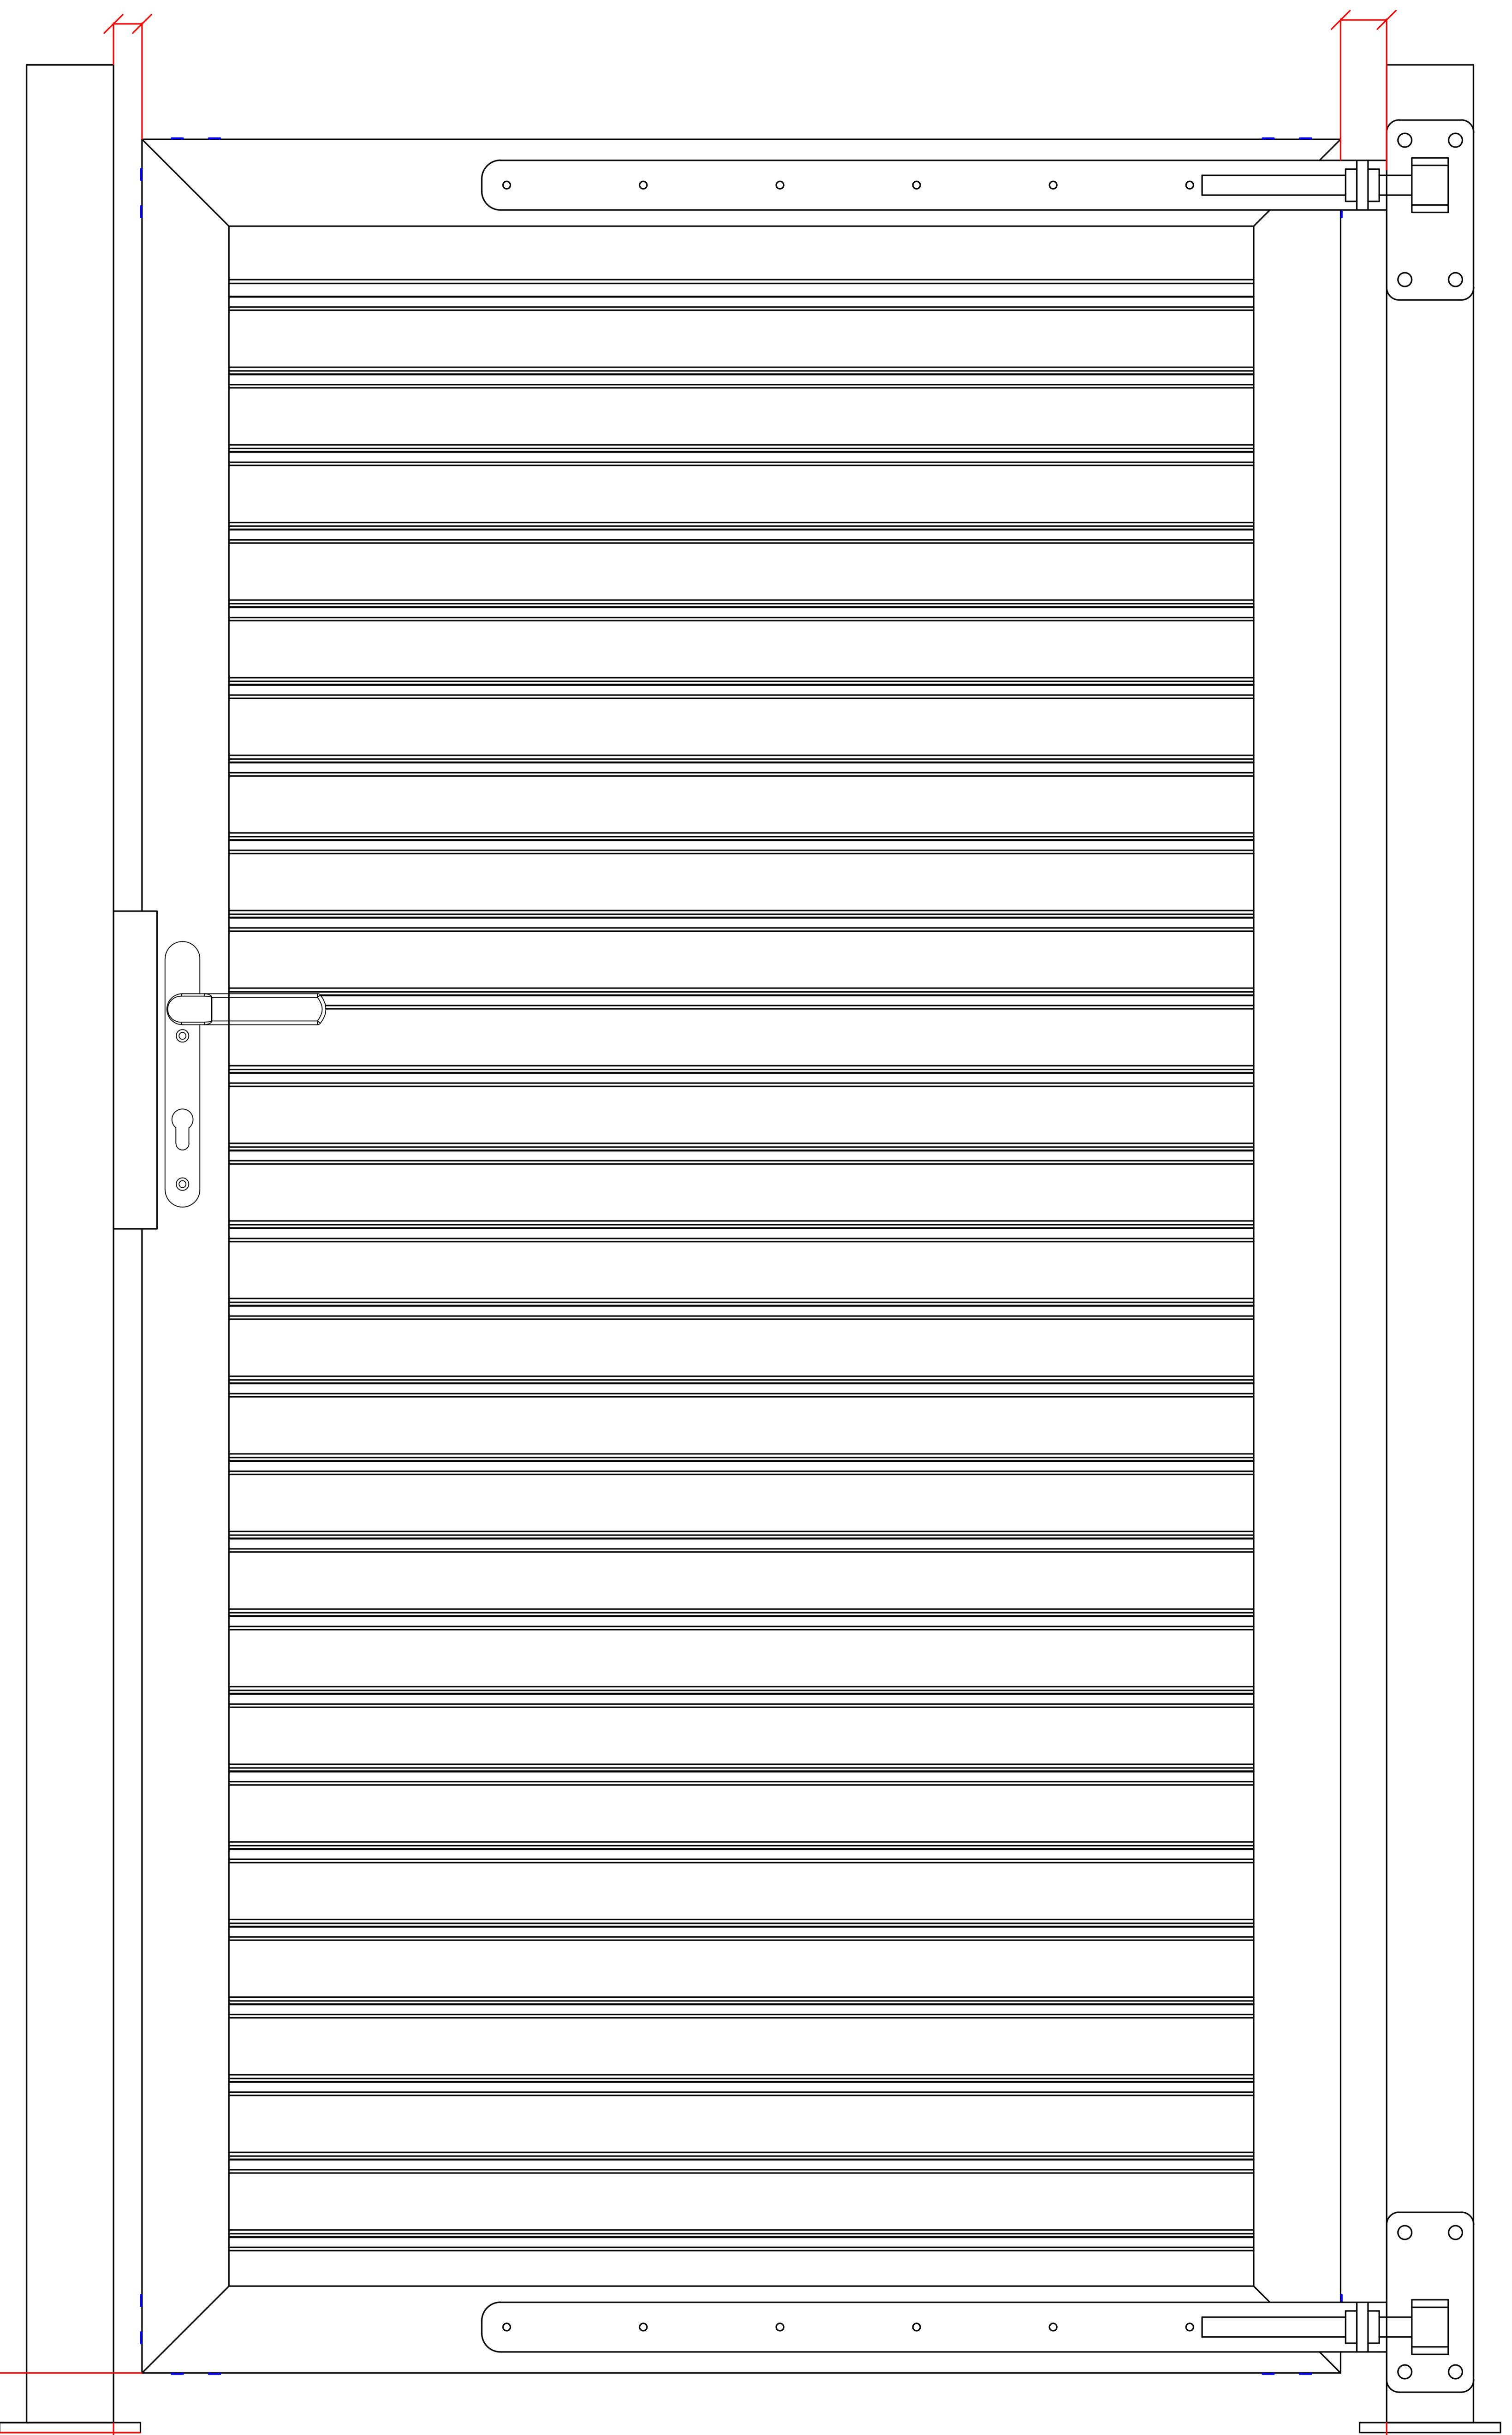



A1 x1

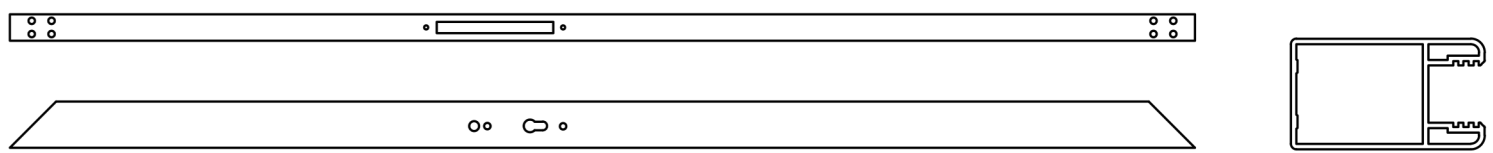


A2 x1

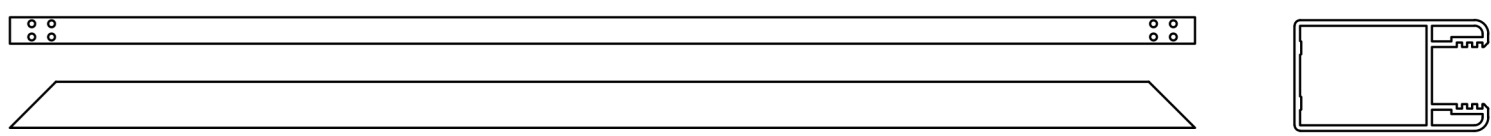


A3 x2

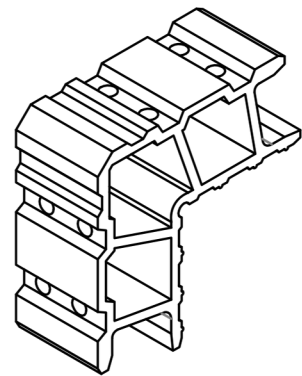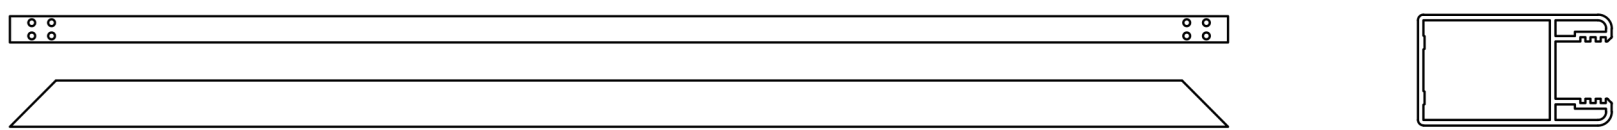

A4 x4

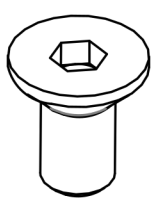


A5 x32

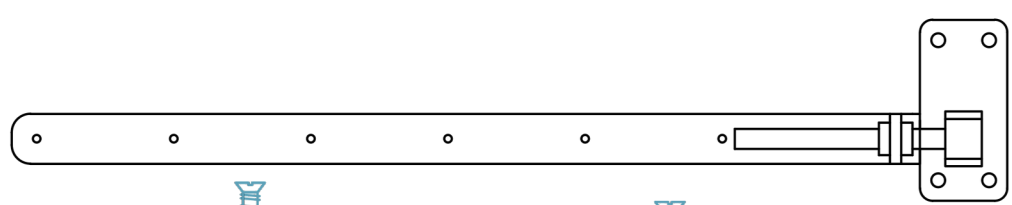

\*4  
M6. 3\*32

\*7  
M4. 8\*25


A6 x1

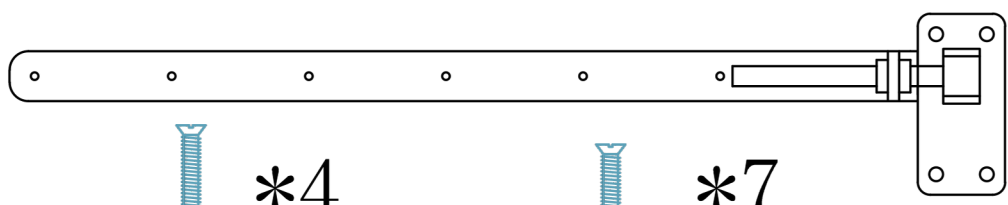


\*4  
M6. 3\*32

\*7  
M4. 8\*25

A7 x1

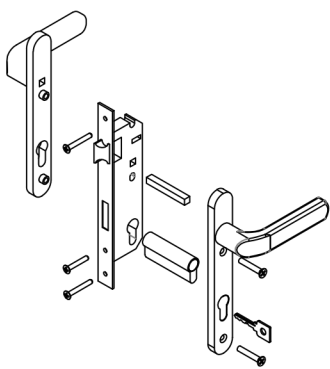



A8 x1




\*2  
M5. 5\*20

A9 x1

1

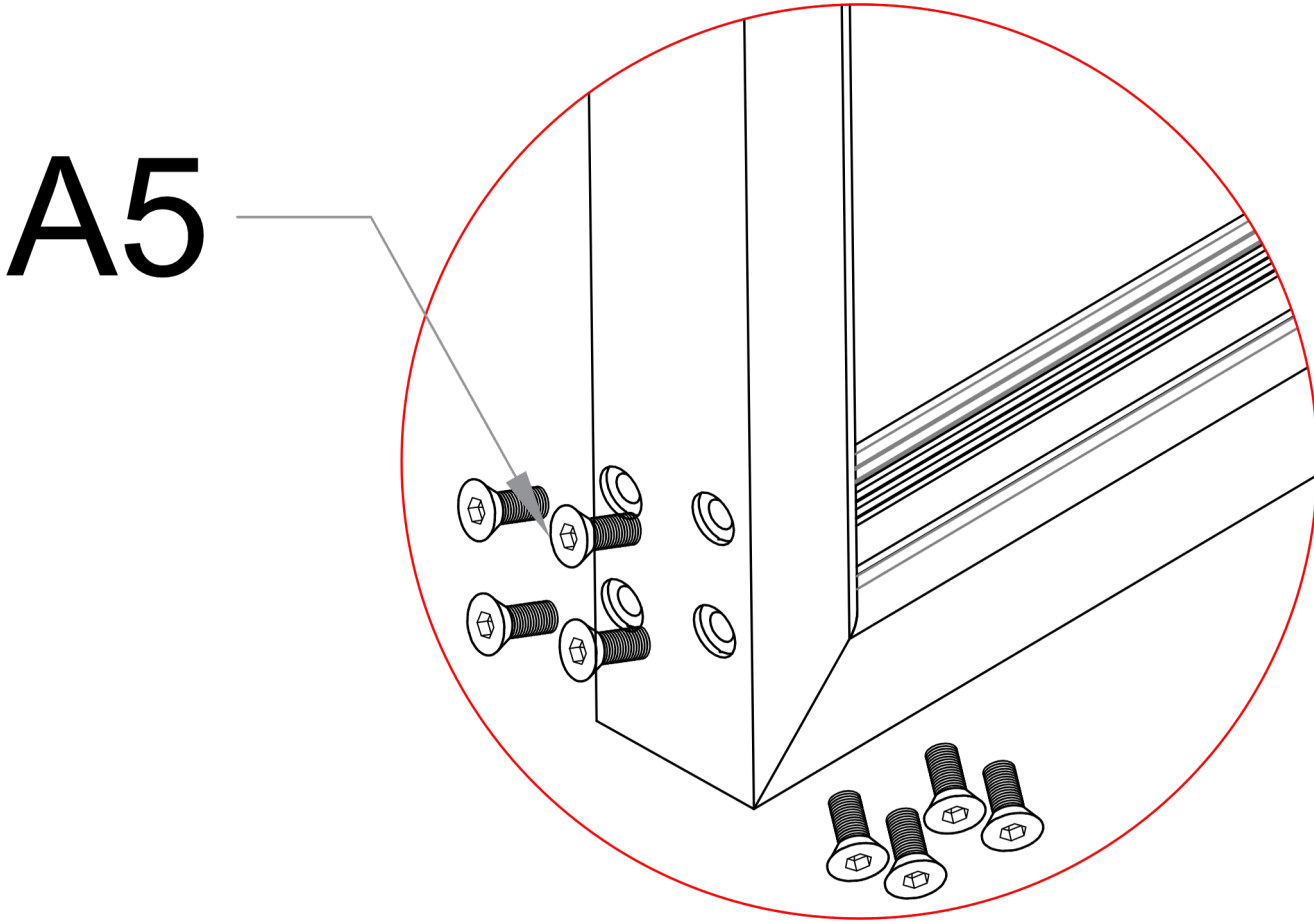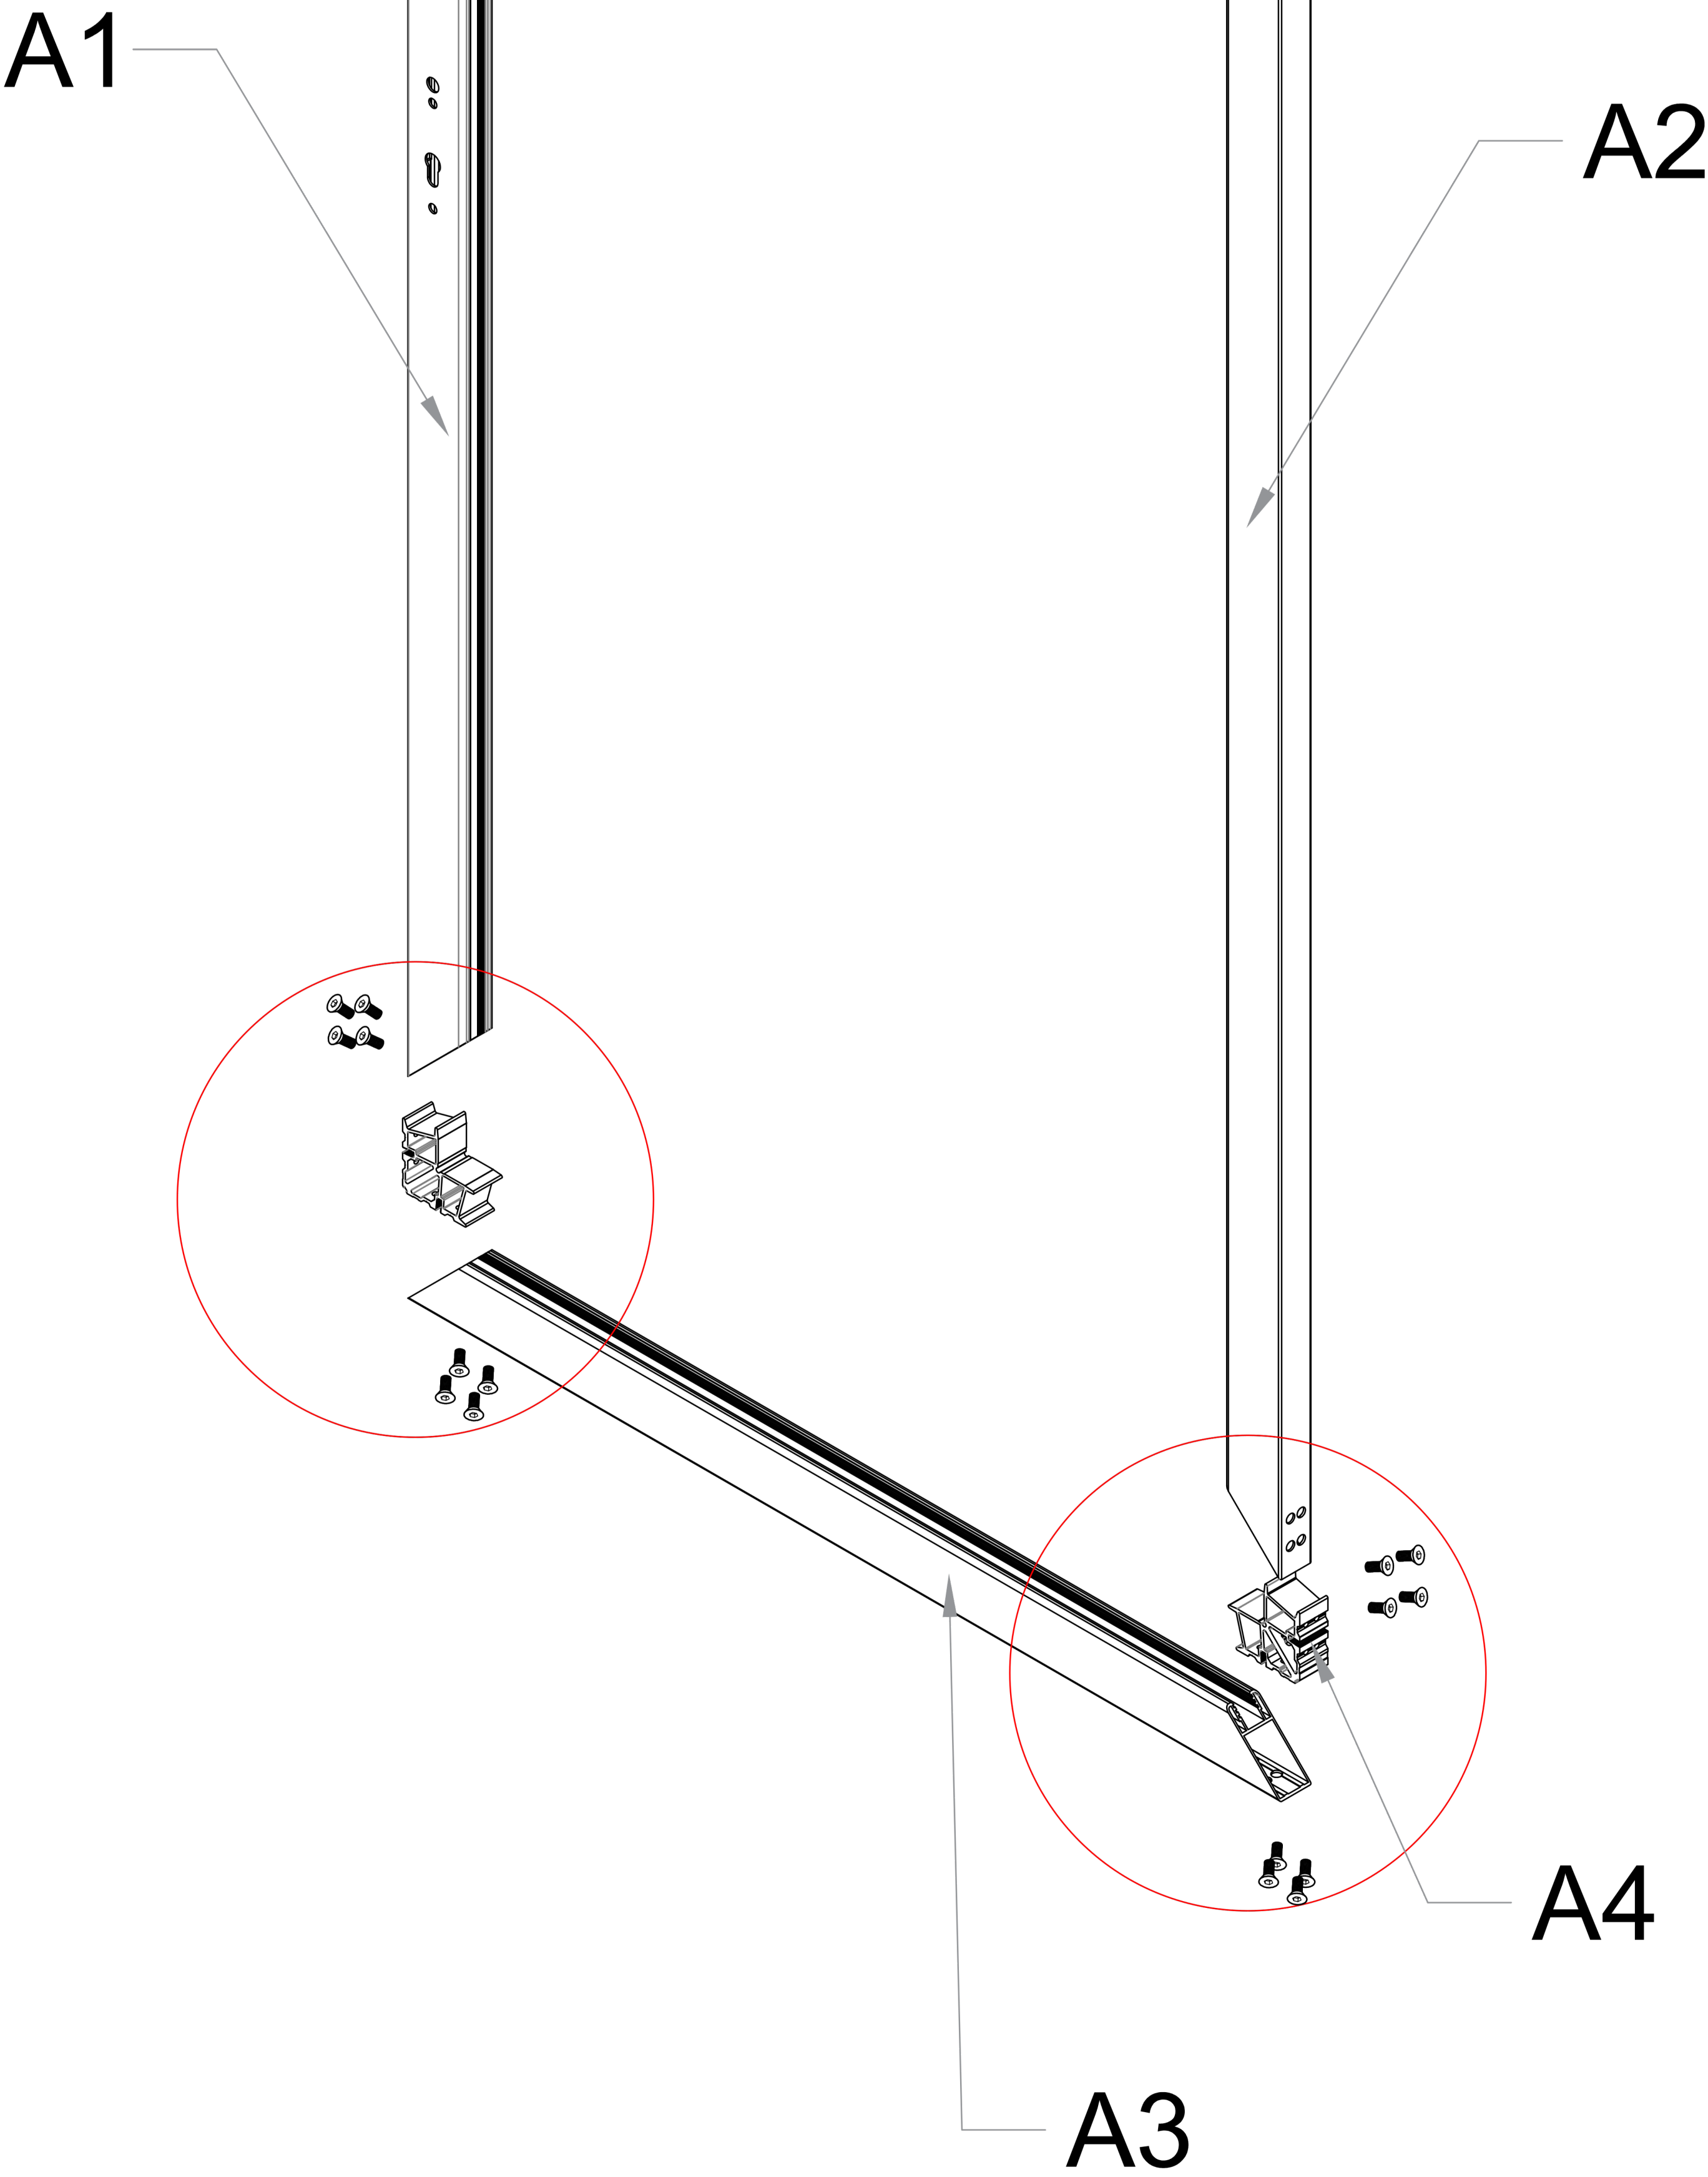



2

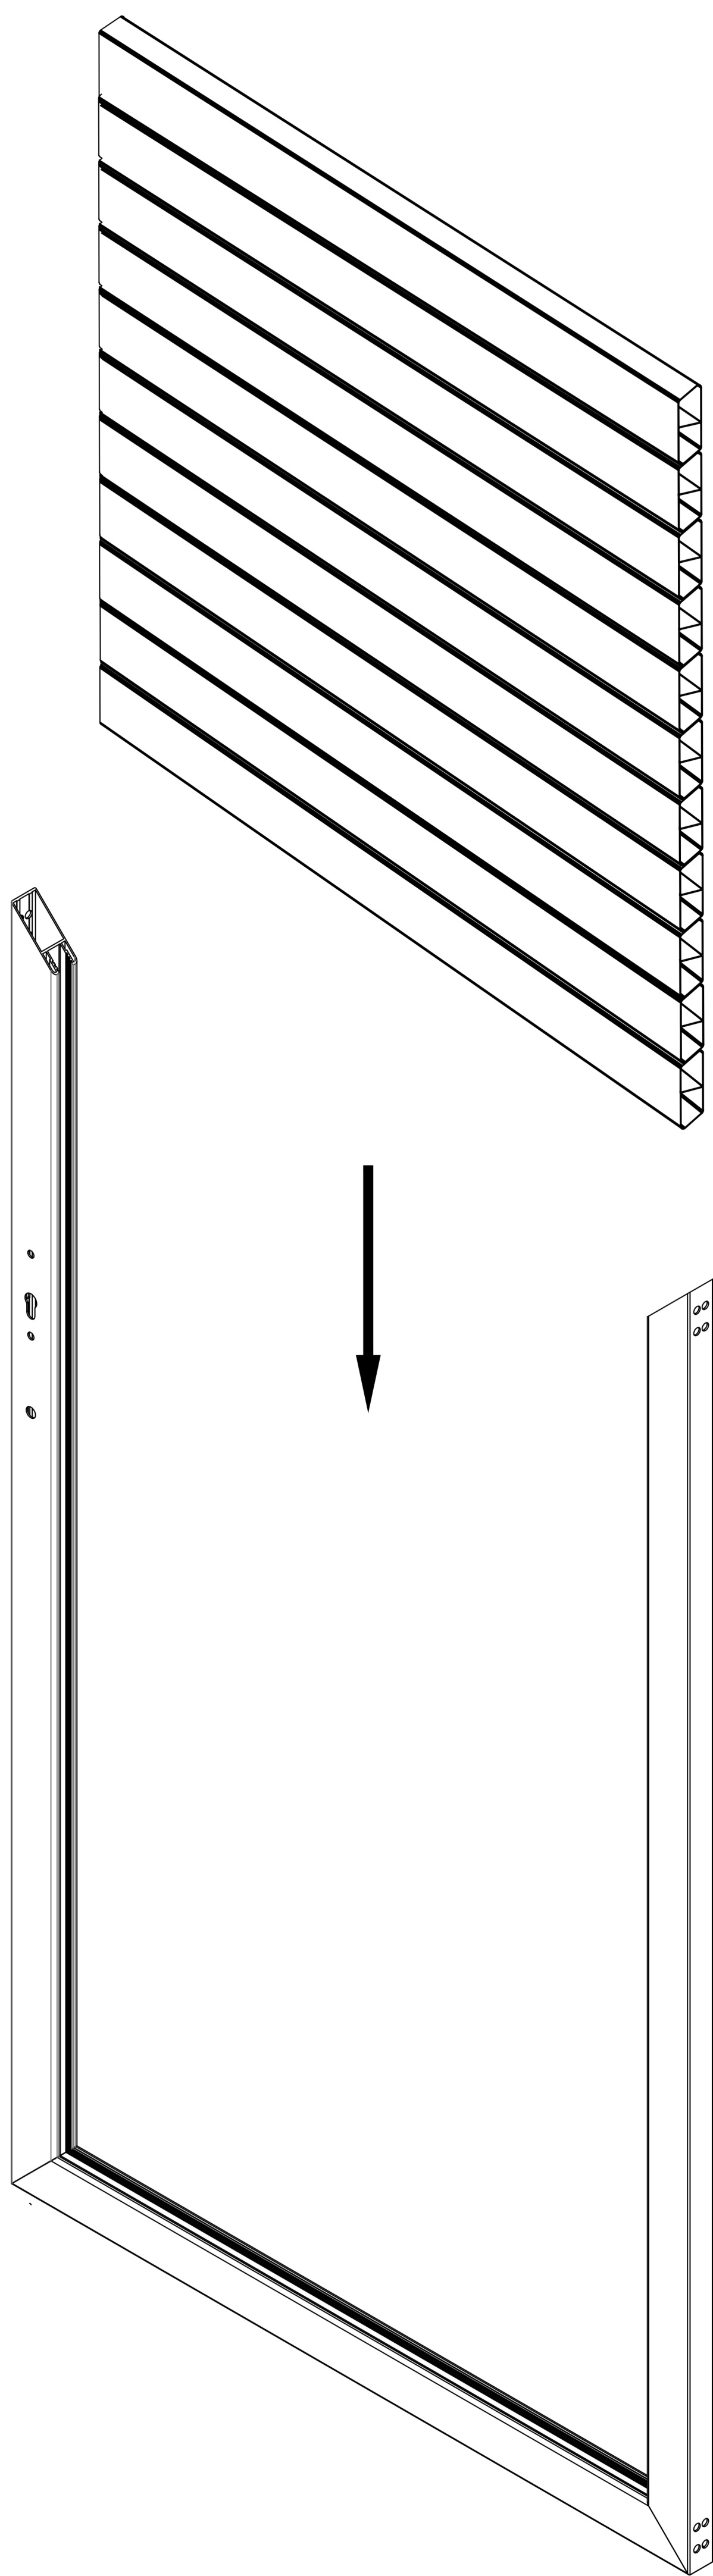


### HINWEIS

Schieben Sie nun die ausgewählte Füllung in die Führungen am Rahmen.

3


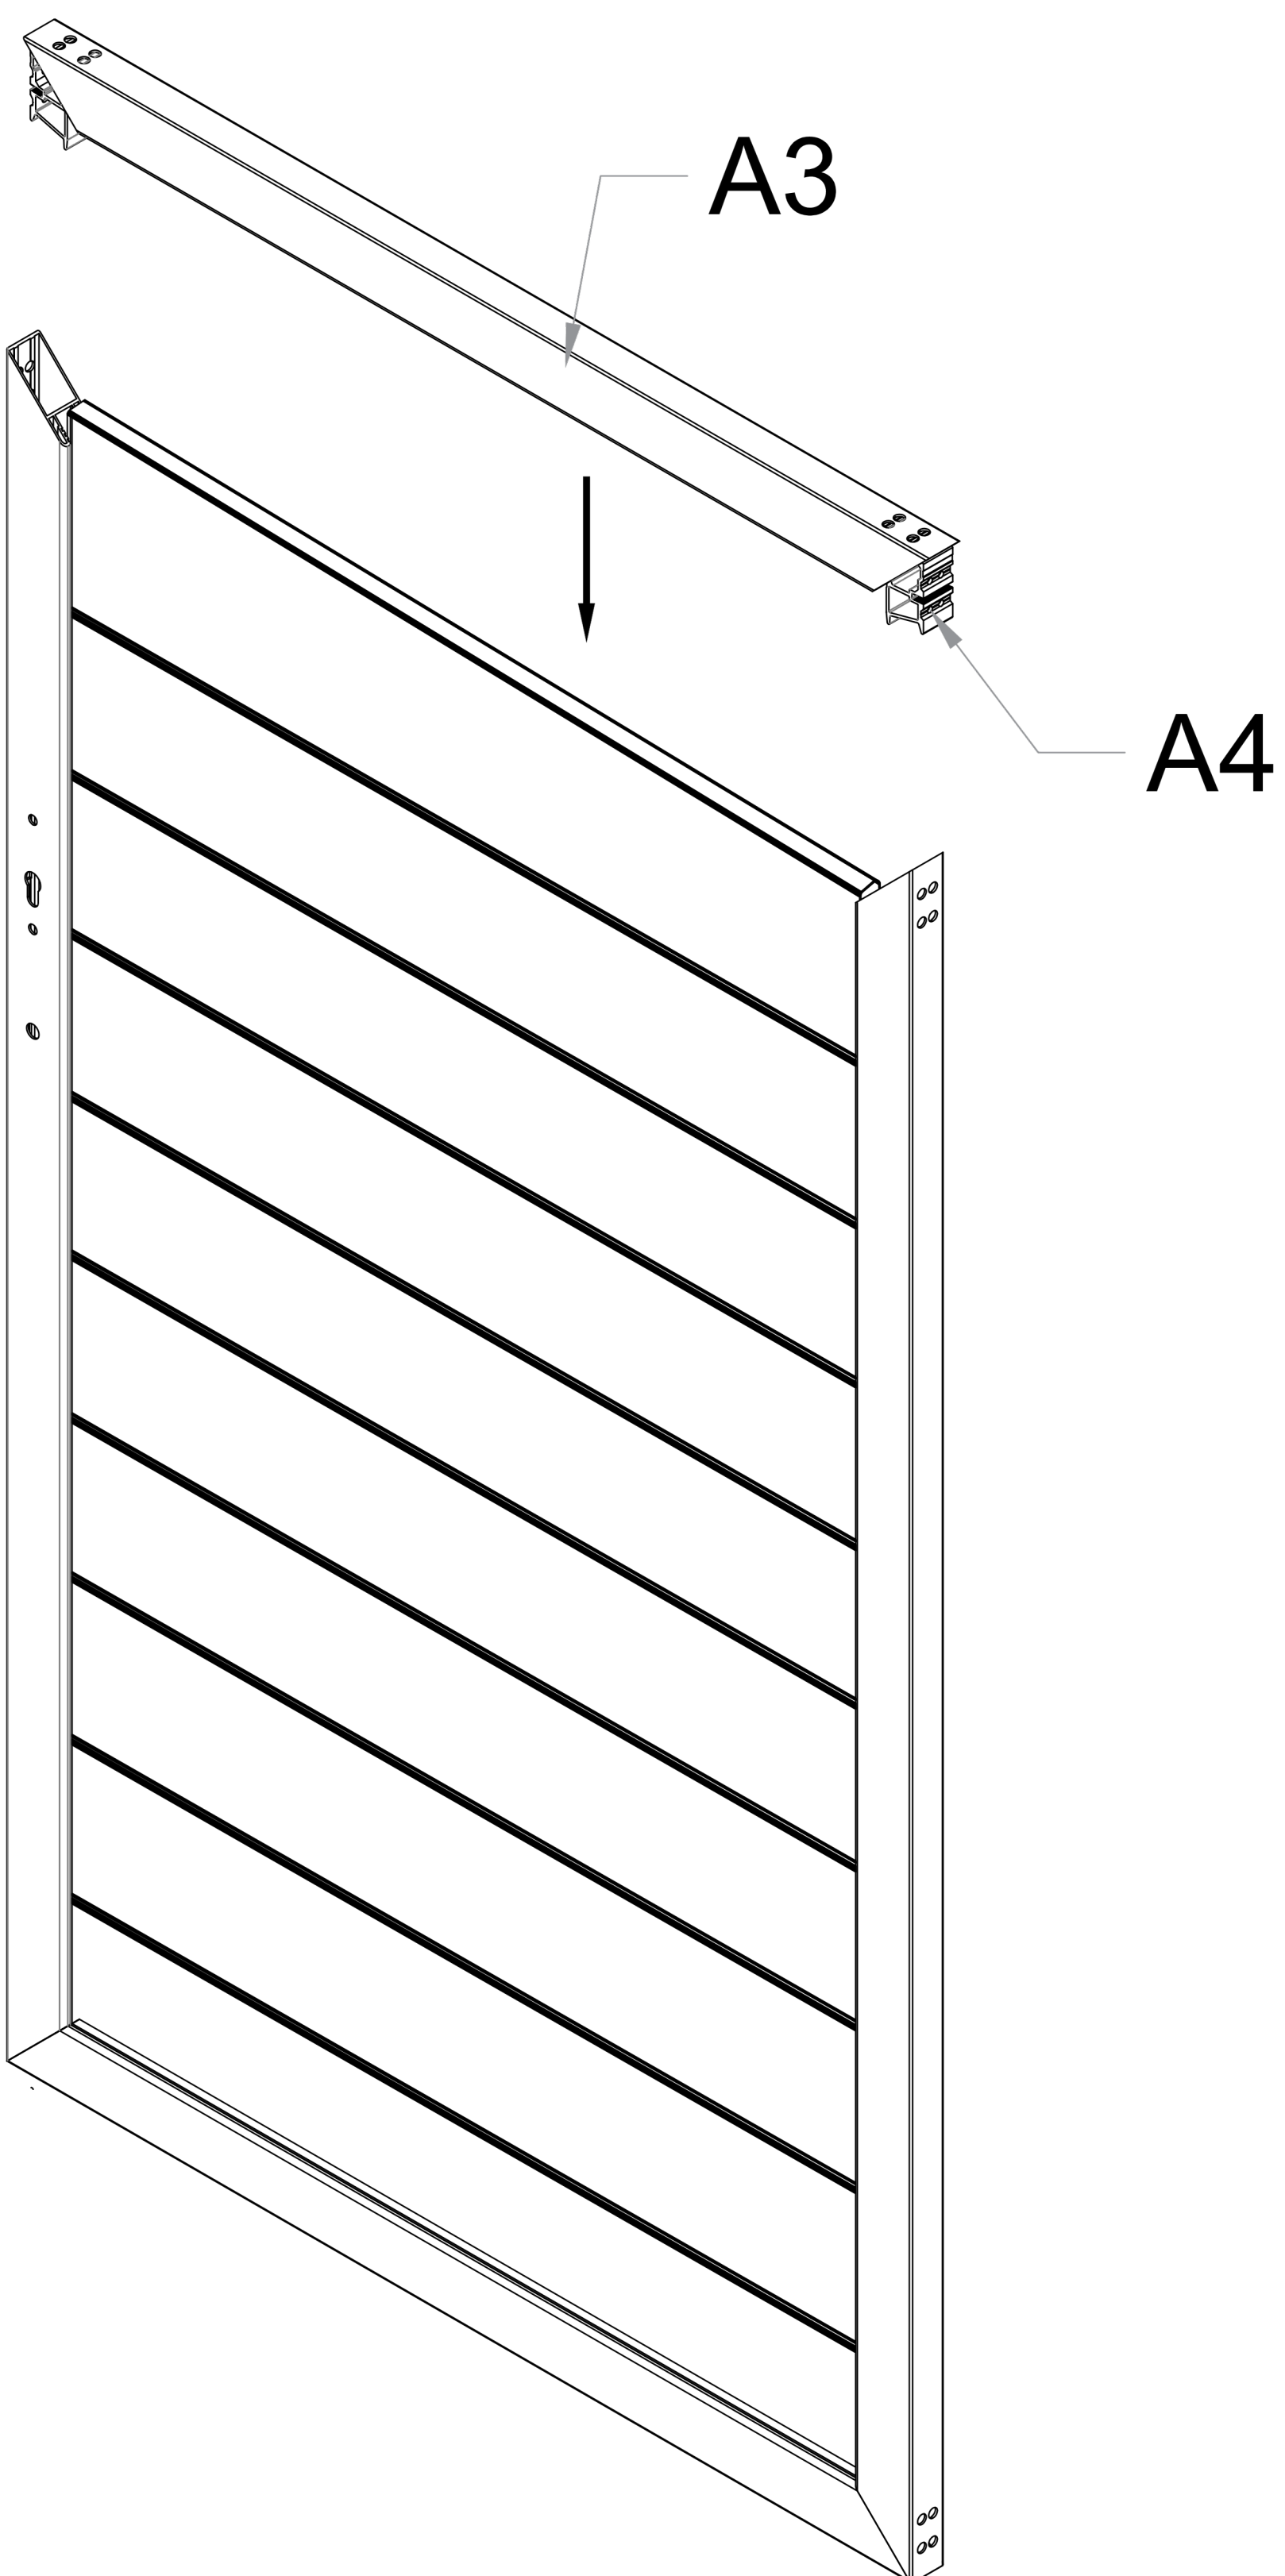
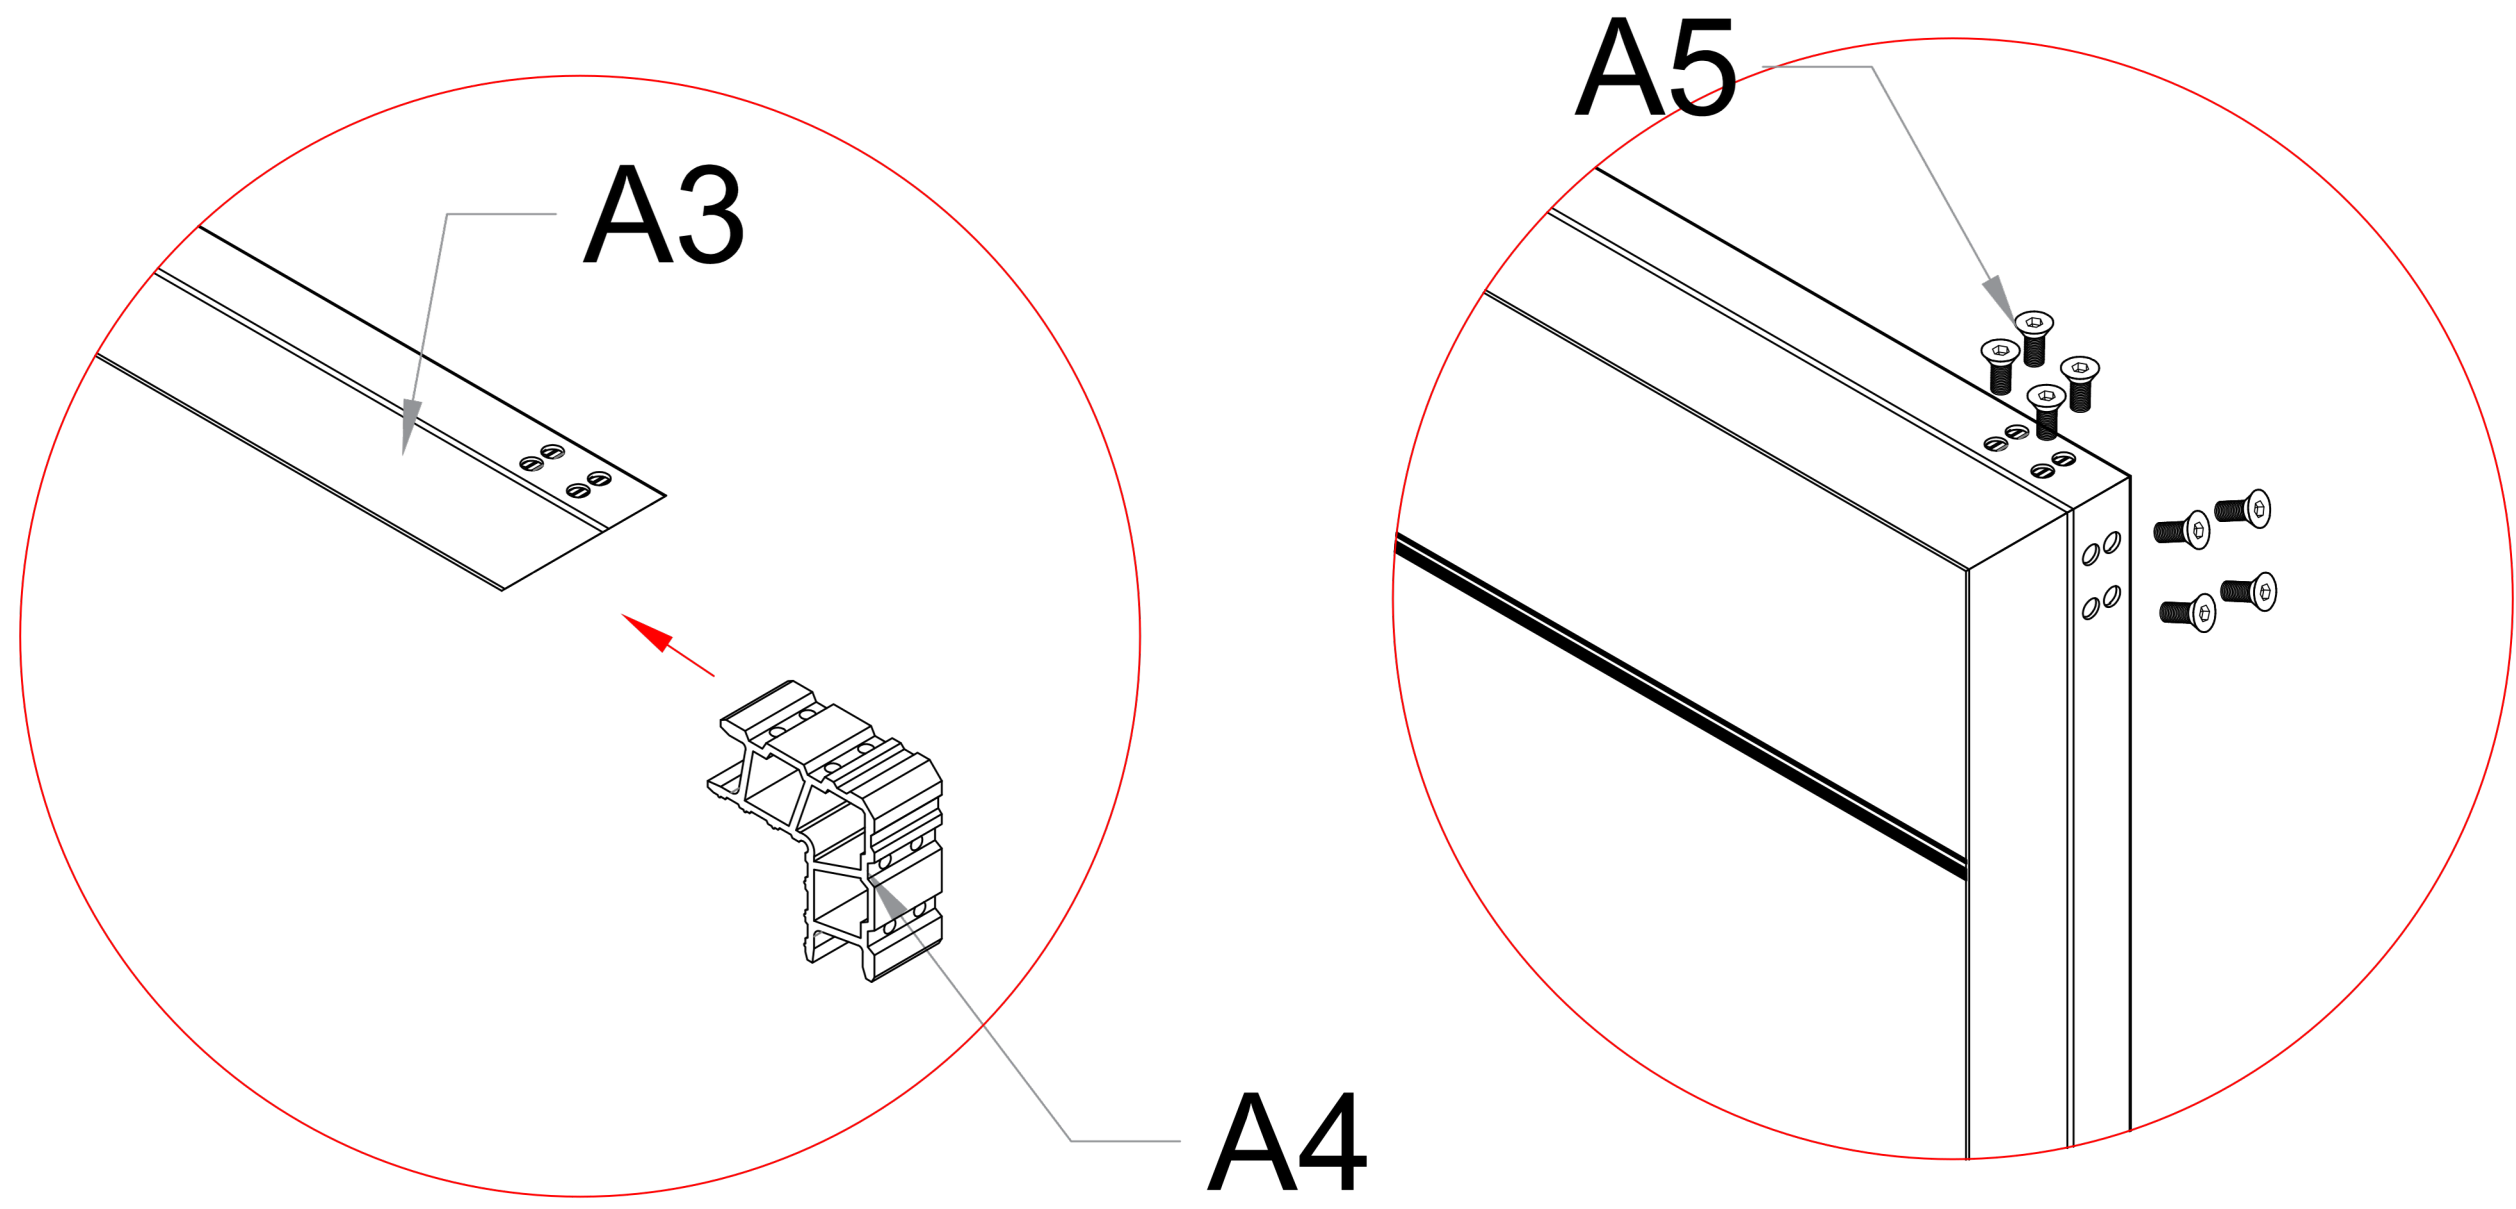


4

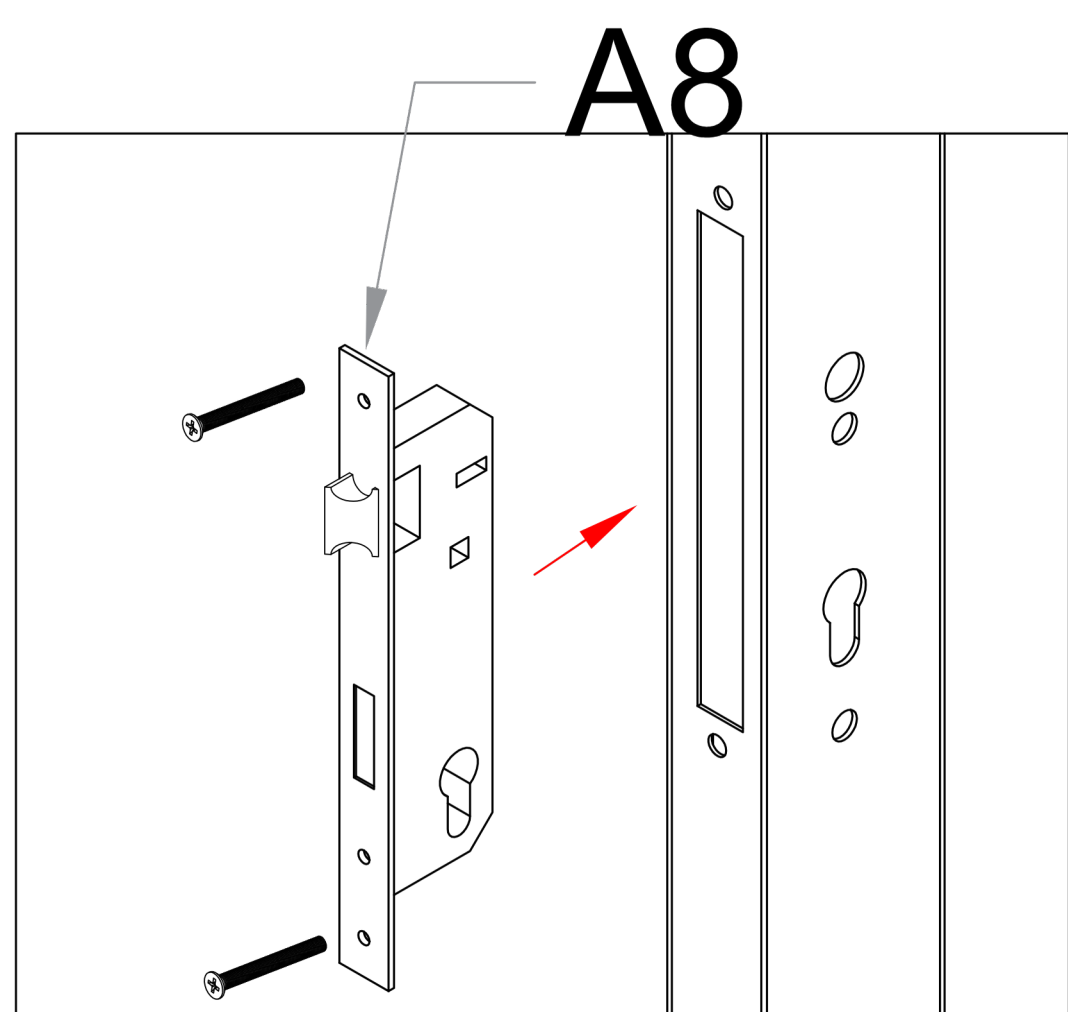

## HINWEIS

Zieh die Schrauben noch nicht ganz fest;  
mach das als letzten Schritt.

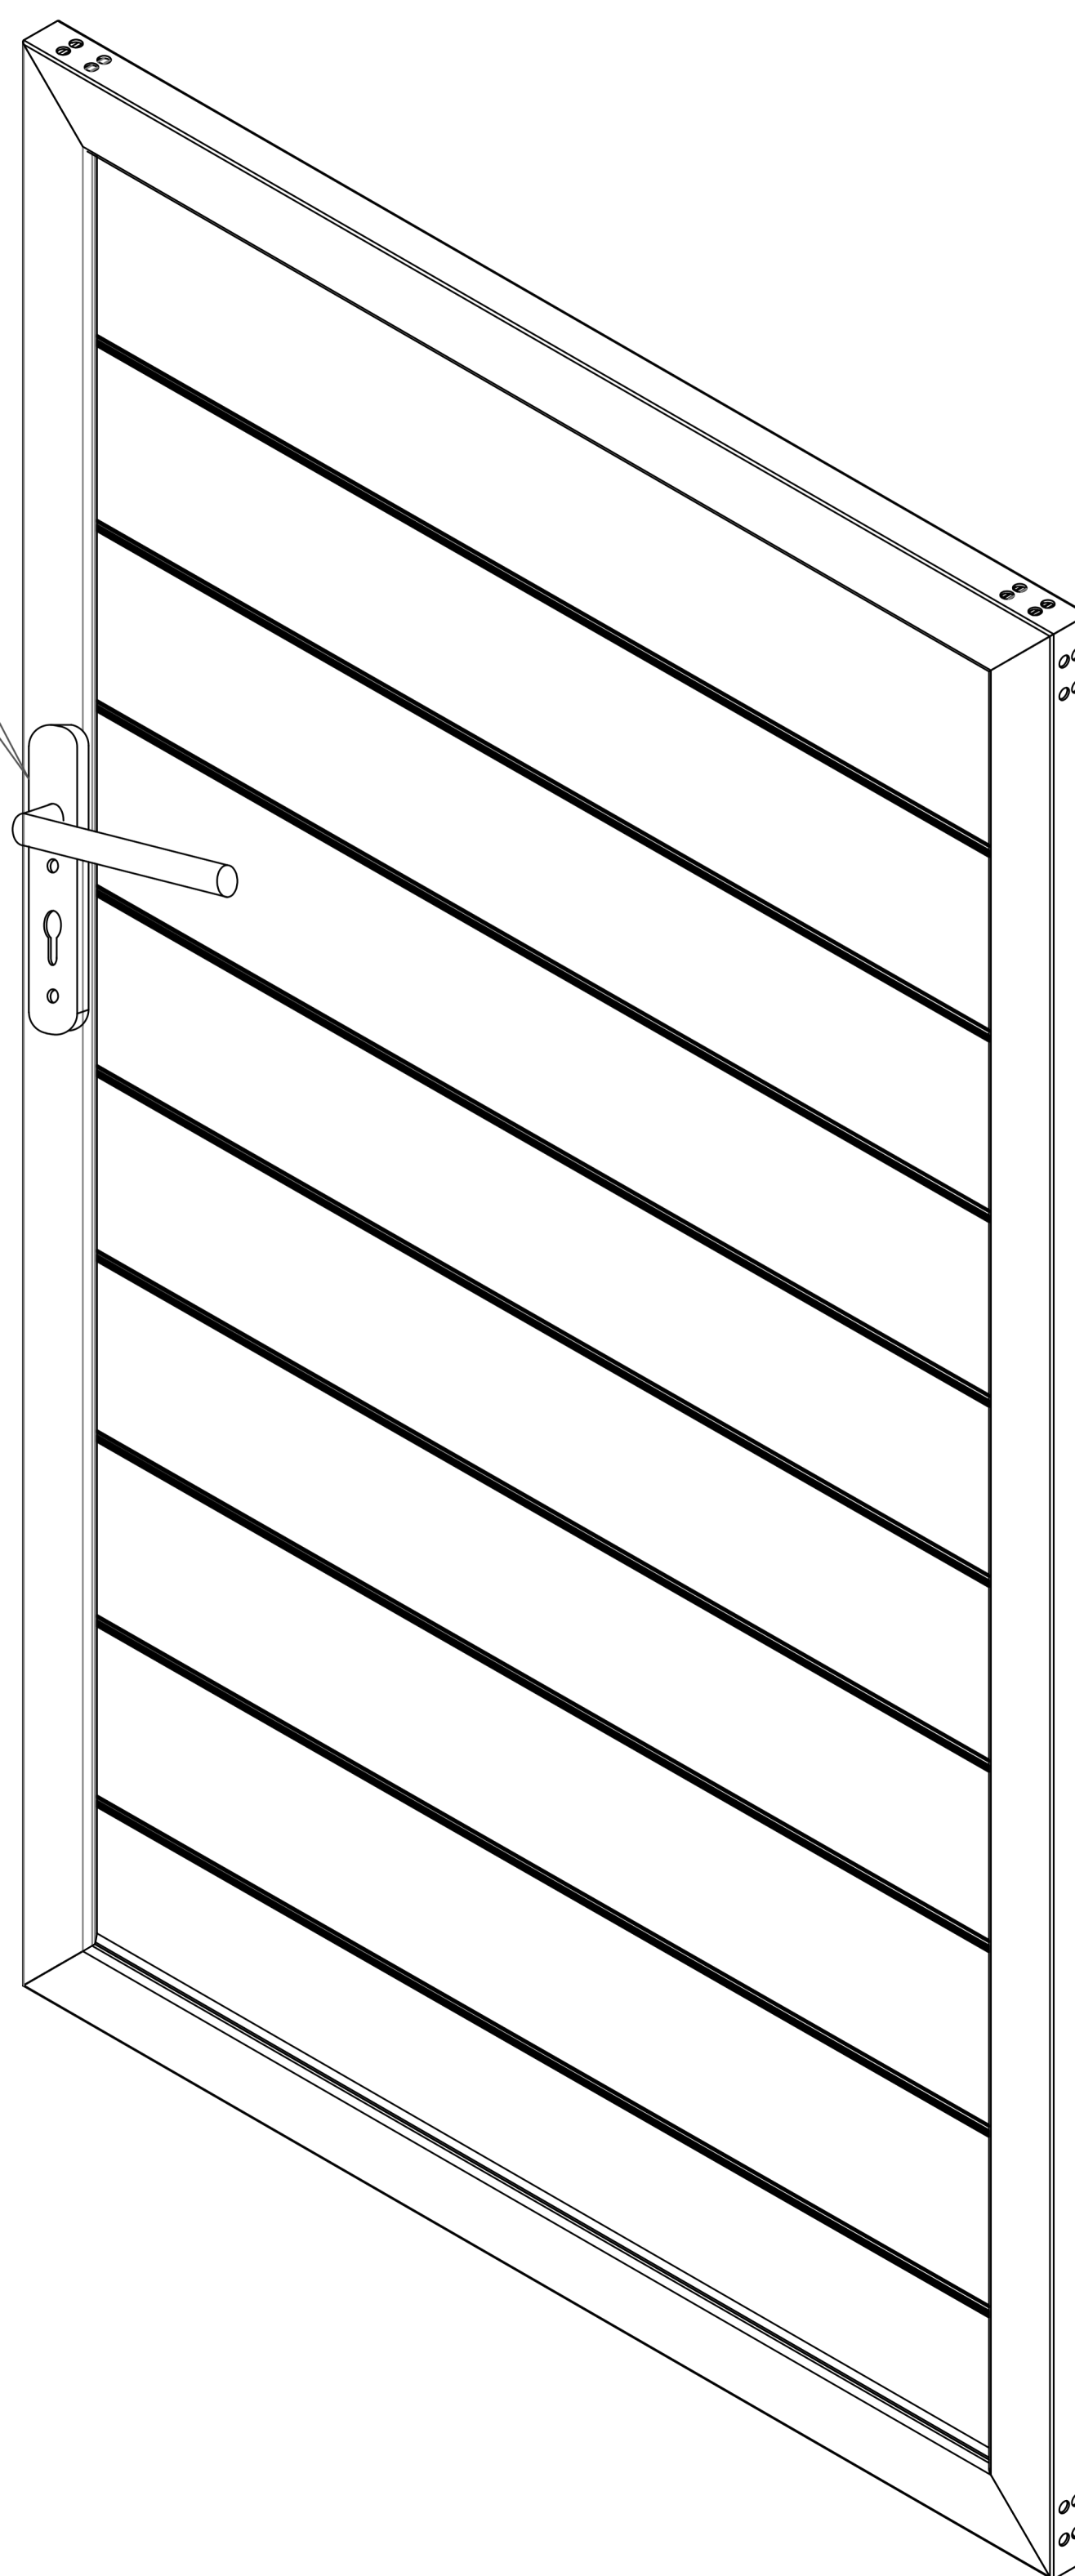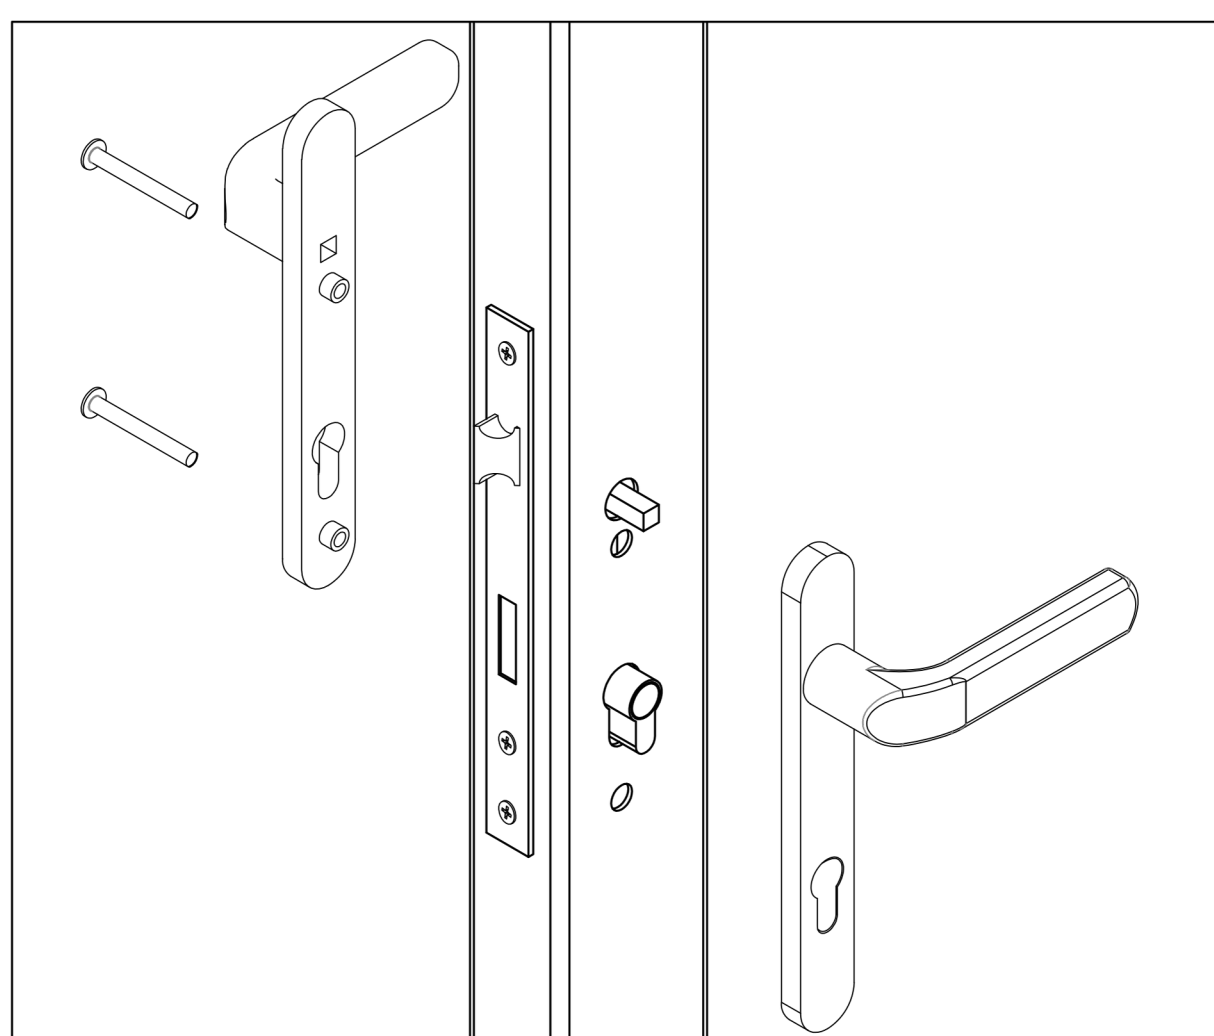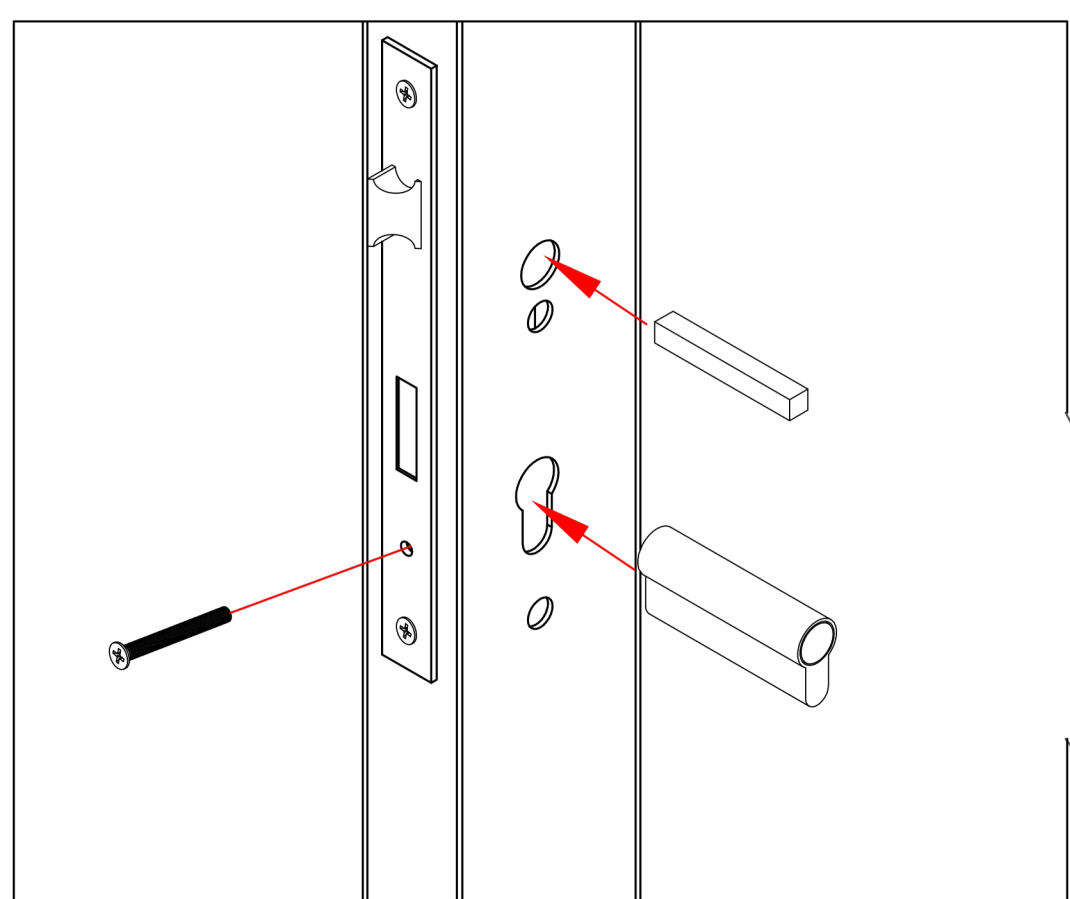

5

